

RONSEAL®

Does exactly
what it says
on the tin®

RONSEAL®

PRECISION FINISH

FENCE SPRAYER

Safety

- Always follow instructions on Ronseal Sprayable packs.
- Always wear suitable protective clothing.
- Wear a mask when ventilation is restricted.
- Do not breathe the vapour or spray – inhalation of particles can be hazardous.
- Take care when spraying near plants, pets and buildings.
- Do not tamper with or block the pressure release valve.
- After cleaning ensure all components are drained of water.
- This unit is only suitable for spraying Ronseal Sprayable products.
- Do not use solvent-based products.

Sherwin Williams Diversified Brands Limited,
Thornccliffe Park, Chapeltown, Sheffield, S35 2YP
Tel: 0114 240 9469
Email: enquiry@ronseal.co.uk
www.ronseal.com

Ronseal (Ire) Limited, Oak House,
Leopardstown Office Park, Sandyford, Dublin 18
Tel: (00353) 1 2135760

RONSEAL and RONSEAL DOES EXACTLY WHAT IT SAYS ON THE TIN are registered trademarks of The Sherwin Williams Company. Ronseal Limited reserve the right to alter the specification without notice. Observe and follow all warning labels and instructions for use shown on tins and packaging. © Ronseal Limited 2017.



User Guide

Make sure you read the instructions before you use the sprayer. It's best to keep them somewhere safe for when you need them next time.

Contents

Your Fence Sprayer	3
How to use your sprayer	4
Cleaning your sprayer	7
Safety advice	8

The Ronseal Precision Finish Fence Sprayer can be used with any Ronseal Sprayable products.

Product disposal


The sprayer should not be thrown away in your household bin. Take it to your local recycling point.


Produced by licence under UK Patent number GB2 426,472

Your Fence Sprayer

Components and controls

- 1 Sprayer unit
- 2 Pump handle
- 3 Locking collar
- 4 Pressure control switch
- 5 Pressure release valve
- 6 Wand holster
- 7 Foot stand
- 8 Flexible spray hose
- 9 Trigger
- 10 Wand locking collar
- 11 Nozzle elbow
- 12 Nozzle
- 13 Filter (inside nozzle elbow)
- 14 Wand
- 15 Handle

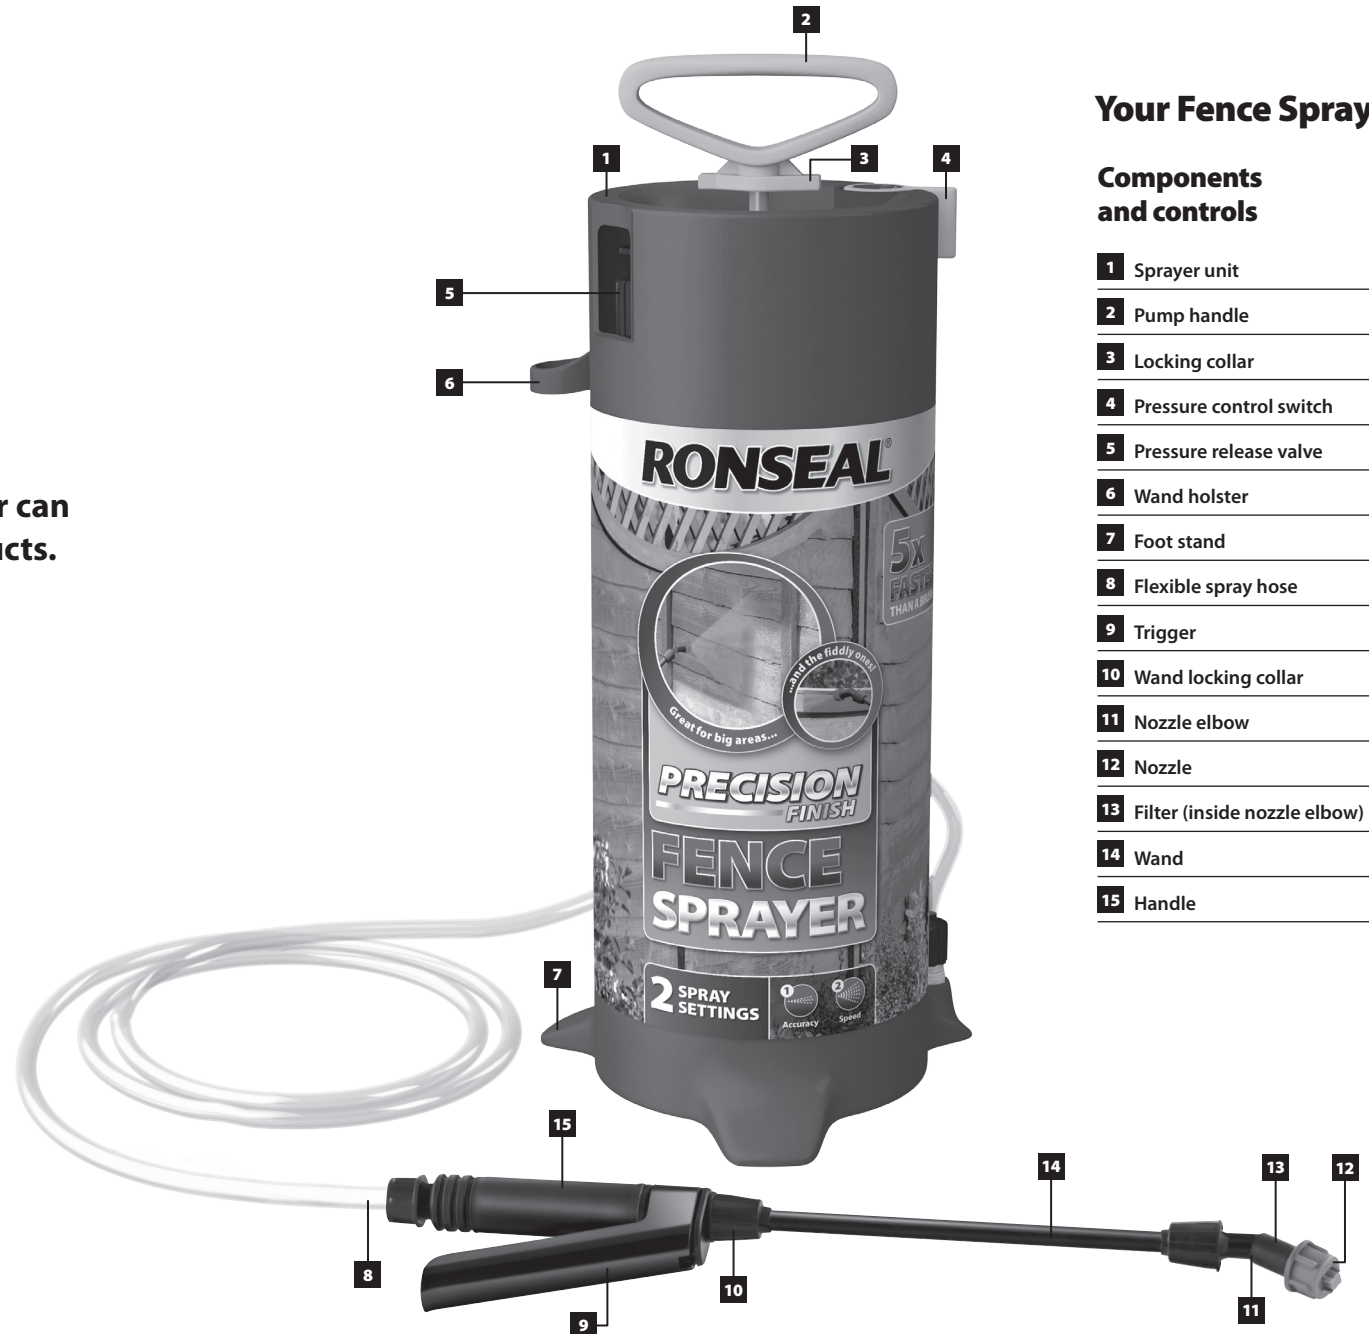

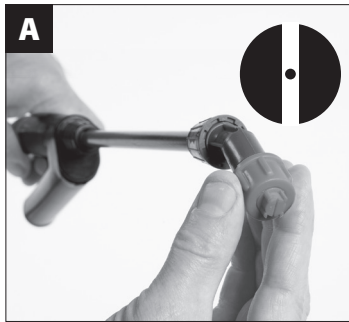

How to use your sprayer

The do's and don'ts

Before you start, make sure it's a warm, dry day. Then mask off any areas that you don't want to spray. Don't spray in windy weather otherwise you could end up spraying more than just your fence.




Connect the wand to the handle and make sure that all connections to the sprayer, wand and hose are hand tightened before you start.

Adjust the nozzle so that it's vertical and in line with the trigger **A**.

Filling your sprayer

Give your Ronseal Sprayable liquid a good shake. Push down the handle of the sprayer and turn anti-clockwise until the pump pulls out. Fill with liquid to the desired level **B C**. The unit is designed to hold 5L of liquid, which is marked on the unit, make sure you don't go over this limit. Once it's full, insert the pump and turn the handle clockwise to fully tighten. You're now ready to start.

A reminder, don't use any solvent based liquids in your sprayer, as this will damage the unit.

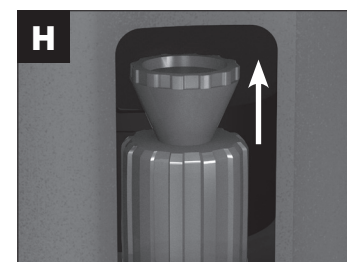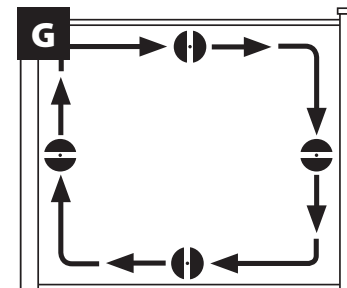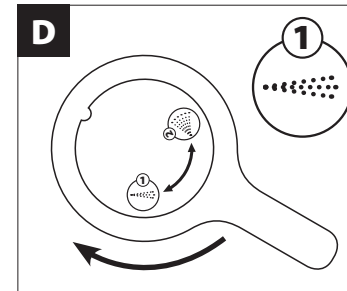

How to use your Precision Finish Fence Sprayer

1. Accuracy – ideal for outlining and fiddly spaces

This setting is ideal for control and precision.

You can use this setting to outline the edges of your fence panel, or to spray narrow panels or fiddly areas, as it gives less overspray in those hard to reach corners.

Turn the dial to setting number 1 **D**.


Start pumping the handle **E** up and down to pressurise the sprayer. You'll hear a slight hissing noise from the release valve when the unit is pressurised.

Make sure the nozzle is no more than 15cm away from the fence. Pull the trigger **F** to begin spraying.

Working more quickly when using this setting will help to avoid drips or runs.

When moving vertically to outline a panel or spraying fence posts, turn the handle so that the spray pattern is horizontal before moving up or down the fence **G**.

Refill with Ronseal Sprayable liquid as required. Before removing the pump, make sure any pressure is released by lifting the pressure release valve **H**.

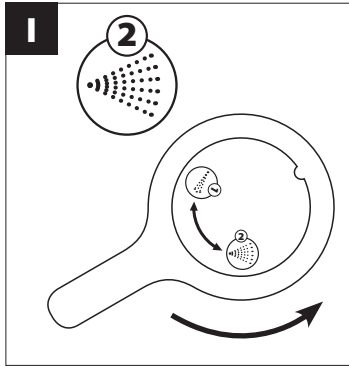

2. Speed – for big areas

This is perfect for speed, allowing you to finish the job fast.

Turn the dial to setting number 2 **I**.

Start pumping the handle **J** up and down to pressurise the sprayer. You'll hear a slight hissing noise from the release valve when the unit is pressurised.



When using the Speed setting, stand with the nozzle around 25cm away from the fence.

Use long sweeping arm movements rather than short wrist movements. You should slow down your arm movements when using this setting. When moving down the fence overlap part of your previous pass by 50%, this will make sure the whole area is covered with the correct amount of product.

You should keep the nozzle vertical when using this spray setting.

If there's enough pressure left in the sprayer, once you've filled in one fence panel you can go straight on to outline the next one. Switch the dial to number 1 and wait for the hissing to stop. If there's no hissing when the dial is turned, the pressure will need to be topped up before you start spraying again.

Refill with Ronseal Sprayable liquid as required. Before removing the pump, make sure any pressure is released by lifting the pressure release valve.

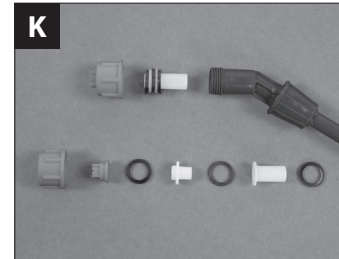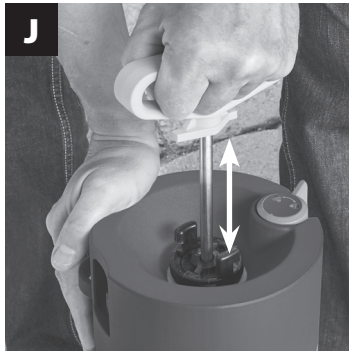

Cleaning your sprayer

1. Clean up

To empty the sprayer, push the pump handle all the way down and lift the pressure release valve until no 'hissing' can be heard. Once the pressure has escaped, unscrew the pump unit and tip any liquid back into its tub. (Alternatively, spray the excess liquid back into its tub before releasing pressure).

Remove as much product as possible before cleaning, some local authorities have special facilities for the disposal of waste coatings. Don't empty into drains or watercourses. It's important that the sprayer is cleaned thoroughly after use. Don't leave the sprayer filled with product when not in use or overnight.

Rinse out the sprayer several times with clean water, then refill with clean water. Re-pressurise and then spray through the nozzle until the water runs clear, it's best to do this on the Speed setting.

2. Cleaning the wand filter

Unscrew the wand handle from the trigger and clean the filter with clean water.

3. Cleaning the nozzle and nozzle filter

Remove the nozzle and white filter and clean with warm, soapy water and an old toothbrush.

Make sure you don't use a sharp object as this will damage the nozzle and ruin the spray pattern. Put the nozzle back together and take care to do this in the correct order **K**.